

jura®



E6/E60 – Quick Reference Guide

E6/E60 – Quick Reference Guide



These short instructions do not replace the ‘E6/E60 Instructions for Use’. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

Rinsing the machine

You can start coffee system rinsing manually at any time.



Precondition: The start screen is displayed.

- ▶ Place a receptacle under the coffee spout.
- ▶ Press the ‘P:’ button.
- ▶ Press the ‘>’ button.
- ▶ Press the ‘Rinse the coffee system’ button to start the rinse operation.



The operation stops automatically.

Rinsing the fine foam frother

After each milk preparation, the E6 prompts you to perform a milk system rinse.



Precondition: ‘Rinse the milk system’ is displayed.

- ▶ Place a receptacle under the fine foam frother.
- ▶ Press the ‘P:’ button.
‘Open switch’
- ▶ Turn the switch to the  position.
The fine foam frother is rinsed.
‘Close switch’
- ▶ Turn the switch to the  position.

Cleaning the fine foam frother

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk





CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

i JURA milk system cleaner is available from specialised dealers.

Precondition: The start screen is displayed.


- ▶ Press the 'P:⚙️' button.
- ▶ Press the 'Clean the milk system' button.
- ▶ Press the 'Start' button.
- ▶ Press the 'Next' button.
- 'Milk system cleaner'
- ▶ Remove the milk pipe from the milk container or milk cooler.
- ▶ Pour 250 ml of fresh water into a receptacle and add 1 capful of milk system cleaner.
- ▶ Immerse the milk pipe in the receptacle.
- ▶ Place a receptacle under the fine foam frother.
- ▶ Press the 'Next' button.
- As soon as the machine has heated up, 'Open switch' appears.
- ▶ Turn the switch to the  position.
The fine foam frother and the milk pipe are cleaned.
- 'Close switch'
- ▶ Turn the switch to the  position.
- 'Fresh water'
- ▶ Rinse the receptacle thoroughly, fill it with 250 ml of fresh water and immerse the milk pipe in the water.
- ▶ Empty the other receptacle and place it under the fine foam frother once more.
- ▶ Press the 'Next' button.
- 'Open switch'
- ▶ Turn the switch to the  position.
The fine foam frother and the milk pipe are rinsed with fresh water.
- 'Close switch'
- ▶ Turn the switch to the  position.



Dismantling and rinsing the fine foam frother

To make sure the fine foam frother works properly, and in the interests of hygiene, it must be dismantled and rinsed **daily** if you have been preparing milk.

- ▶ Remove the milk pipe and rinse it thoroughly under running water.
- ▶ Remove the fine foam frother.

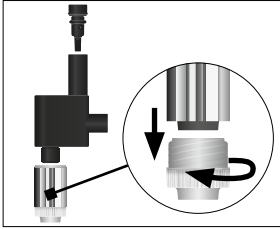

- ▶ Dismantle the fine foam frother into its individual parts.
- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 250 ml cold water and 1 capful of JURA milk system cleaner. Then rinse the parts thoroughly.
- ▶ Re-assemble the fine foam frother.

i Ensure that all individual parts are correctly and firmly connected to ensure optimum operation.


- ▶ Re-fit the fine foam frother on the milk system.

Inserting/changing the filter

Your E6 no longer has to be descaled if you are using the CLARIS Smart filter cartridge.

i Once the filter cartridge stops working (depending on the water hardness setting), the E6 will prompt you to change the filter.

 
i CLARIS Smart filter cartridges are available from specialised dealers.

Precondition: The start screen is displayed. The filter symbol  lights up red (if you are already using a filter and it is depleted).

- ▶ Remove and empty the water tank.
- ▶ Turn the filter cartridge anticlockwise and remove it along with the extension from the water tank.
- ▶ Fit the filter cartridge extension on top of a **new** CLARIS Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.


The machine automatically detects that you have just inserted/changed the filter cartridge.


'Open switch'

- ▶ Turn the switch to the  position.

'Filter is being rinsed'

'Close switch'

- ▶ Turn the switch to the  position.

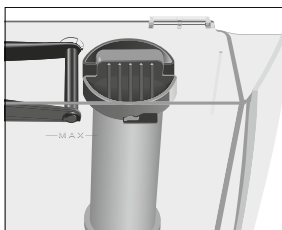

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the E6 will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

Precondition: 'Clean machine' is displayed.

- ▶ Press the 'P:☼' button.
'Clean'
- ▶ Press the 'Start' button.
- ▶ Press the 'Next' button.
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Clean'
- ▶ Place a receptacle under the coffee spout.
- ▶ Press the 'Next' button.
'Machine is being cleaned', water flows out of the coffee spout.
The operation is interrupted, 'Add cleaning tablet'.
- ▶ Open the cover of the filler funnel for the cleaning tablet.
- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
- ▶ Press the 'Next' button.
'Machine is being cleaned', water flows out of the coffee spout several times.
The operation stops automatically.
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.



Descaling the machine

The E6 builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLARIS Smart filter cartridge, you will not be prompted to descale.

⚠ CAUTION If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
- ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.

CAUTION If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

CAUTION If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling programme to run to the end.

CAUTION If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.


- ▶ Clean up any splashes immediately.

i The descaling programme lasts approximately 40 minutes.

i JURA descaling tablets are available from specialised dealers.

Precondition: 'Decalcify machine' is displayed.


- ▶ Press the 'P:⚙️' button.
'Descale'
- ▶ Press the 'Start' button.
- ▶ Press the 'Next' button.
'Empty drip tray'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Agent in tank'
- ▶ Remove and empty the water tank.

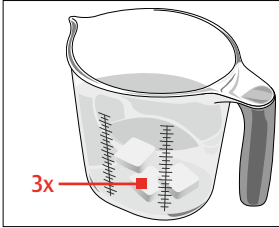


- ▶ Completely dissolve 3 JURA descaling tablets in a receptacle holding 500 ml of water. This may take several minutes.
- ▶ Pour the solution into the **empty** water tank and insert it into the machine.

'Open switch'



- ▶ Place a receptacle under the fine foam frother.
- ▶ Turn the switch to the  position.
'Machine is being descaled' appears and water flows out of the fine foam frother repeatedly.
The operation is interrupted, **'Close switch'**.

- ▶ Turn the switch to the  position.
'Machine is being descaled', the descaling operation is continued.

The operation is interrupted, **'Empty drip tray'**.


- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

'Rinse the water tank' / 'Fill water tank'




- ▶ Empty the receptacle and place it under the fine foam frother and the coffee spout.
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

'Open switch'

- ▶ Turn the switch to the  position.
'Machine is being descaled', the descaling operation is continued.

The operation is interrupted, **'Close switch'**.

- ▶ Turn the switch to the  position.
The descaling operation is continued. Water flows out of the coffee spout.

The operation is interrupted **'Empty drip tray'**

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

i If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Descaling the water tank

 
Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLARIS Smart filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLARIS Smart filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: 'Fill bean container' is displayed.

- ▶ Switch the machine off with the On/Off button .
- ▶ Remove the aroma preservation cover.
- ▶ Clean the bean container with a soft, dry cloth.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.